




# ITENTFAN003

## Rechargeable Hi-Flow Tent Fan and LED Light Owners Guide

**1**  
YEAR  
WARRANTY

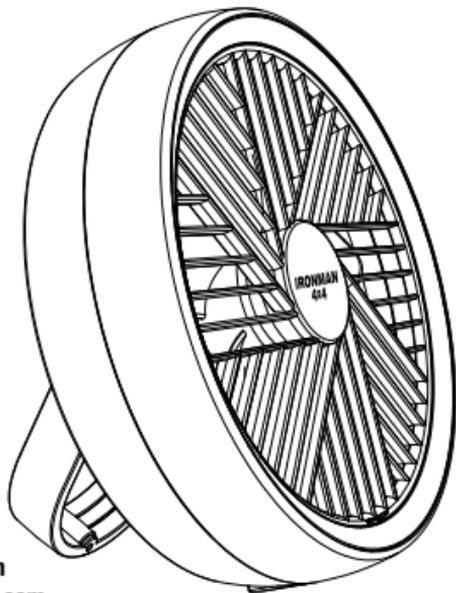

[www.Ironman4x4.com](http://www.Ironman4x4.com)  
[www.ironman4x4america.com](http://www.ironman4x4america.com)

**IMPORTANT:** Please read all procedures and precautions before using the Ironman 4x4 Tent Fan. If you have any questions please contact our customer service department.

## • Operating Steps



### 1. Lighting - Brightness Level

1. Press the "☀️" button once for LOW brightness
2. Press the "☀️" button twice for MED brightness
3. Press the "☀️" button three times for HIGH brightness
4. Press the "☀️" button four times to turn OFF



### 2. Fan - Speed

1. Press the "🌀" button once for LOW speed
2. Press the "🌀" button twice for MED speed
3. Press the "🌀" button three times for HIGH Speed
4. Press the "🌀" button again four times to turn OFF



### 3. Charging

#### ※ Battery Indicator


- 75%-100%
- 50%-75%
- 5%-50%
- 0%-5%

Notice: "●" is on

## • Warning

- Do not look directly in to the LED this may cause eye damage
- Do not leave the product unattended when in use
- Fully charge battery before use
- Recharge the battery only with DC outputs of 5V / 2A Only
- Before use ensure there are no broken or worn parts
- Do not attempt to disassemble or modify the product

## • Specifications

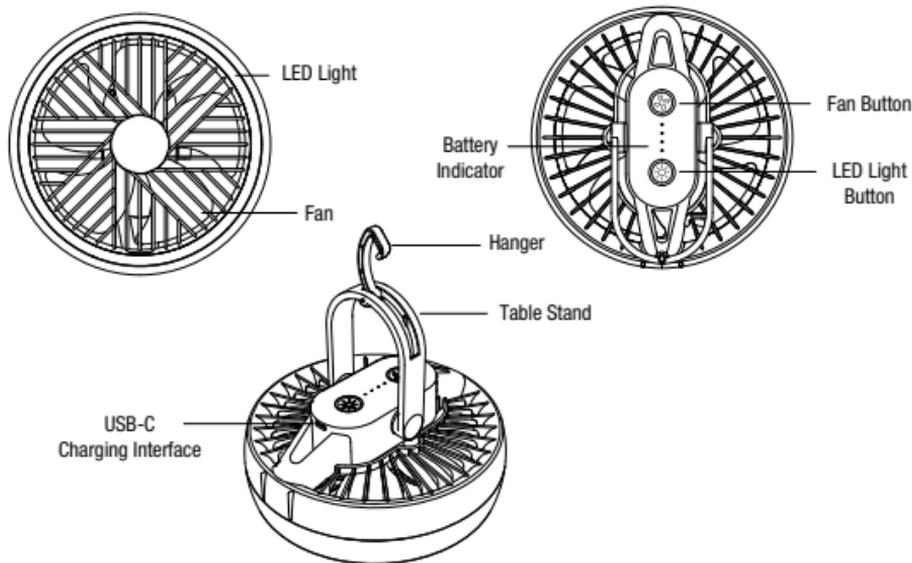

## • Specifications

**Battery Type:** Li-Ion 3,400mAh / 3.7V

**Input:** Type-C 5V/2A (Max)

**Measurement:** 1800 x 76mm

**Weight:** 510g